


Google Stick

Connecting to WIFI

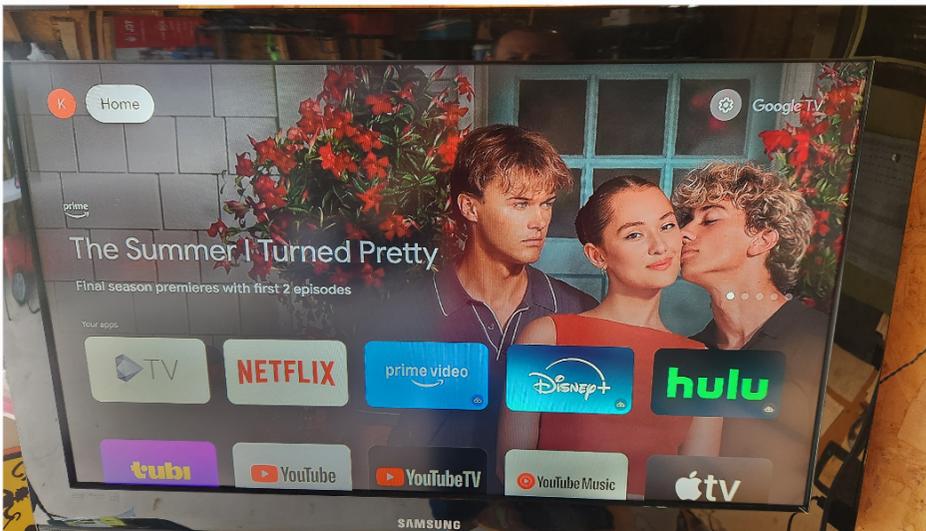


Find this home screen and use white remote to move to gear in upper right corner near "Google TV"




Sub screen will either automatically appear after moving to gear, or select ok (middle white) when in gear.



Select WIFI

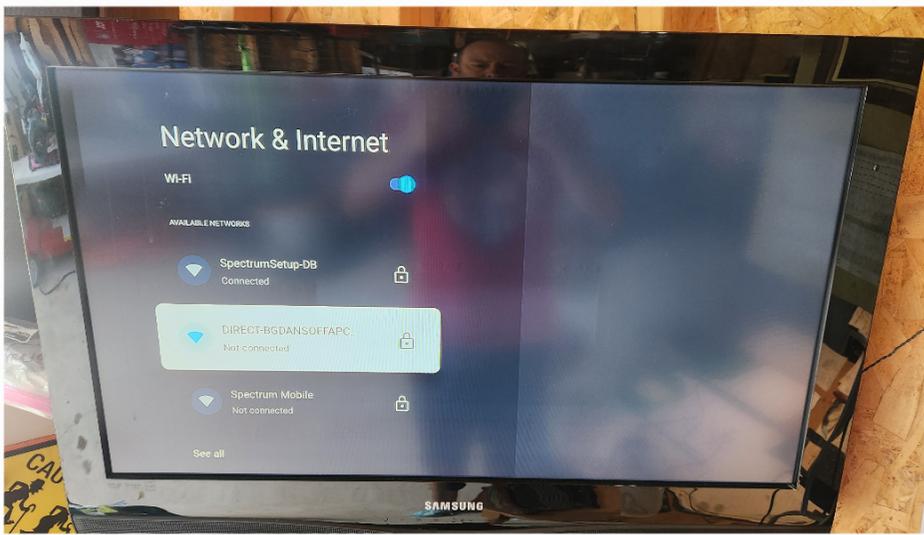

Select network and follow instructions

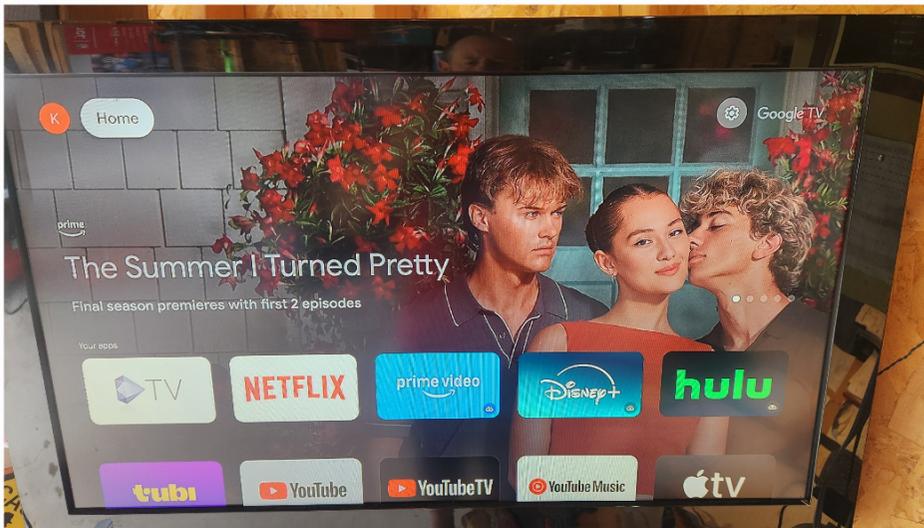

Return to home screen by selecting home button on remote.

